

# MUSTANG DEPOT

## 2010 Mustang GT Full Replacement Bar Grill Instructions



Thank you for purchasing your grill from Mustang Depot!

1. (Shown above with a slightly modified Street Scene front bumper) Begin by removing the radiator cover. This is done by lifting the centers of the 8 plastic snaps that secure it to the car, then removing completely. Gently remove the surround without losing the snaps. Set snaps aside for reassembly.
2. Then remove the fog light electrical connectors. (zip tie the wired connectors out of the way as this installation eliminates the fog lights)
3. Remove OE grill surround with grill. The grill surround is removed with the grill insert and fog lights by simply pulling it off. It snaps in on the sides and the bumper. Just pull firmly but controlled on either side and work your way toward the other side. It's best to have another set of hands on the opposing side to catch it if it pops all the way off unexpectedly.
4. Once you have the grill surround and attached grill insert with fog lights removed, place on a soft surface and remove the fog lights with a 7mm socket.

**2510 E Sunset Rd Suite #7 Las Vegas, NV 89120**

Phone (702) 262-0011 or Fax (702) 262-0099

Copyright © 2010 Automotive Internet Retailers, LLC all rights reserved

# MUSTANG DEPOT



5. Once the fog lights are removed, gently pry the snaps one-by-one of the grill insert from the grill surround as shown.



6. Once the grill surround has been separated from the insert, it's not time to begin installing the billet grill.

# MUSTANG DEPOT



7. Place the billet grill into the insert and shown, center, then mark the bottom holes first as shown below.



8. After marking the bottom marks, drill with 5/32 or similar bit. This will insure you do not go past the head size of the screws.

**2510 E Sunset Rd Suite #7 Las Vegas, NV 89120**

Phone (702) 262-0011 or Fax (702) 262-0099

Copyright © 2010 Automotive Internet Retailers, LLC all rights reserved

# MUSTANG DEPOT



9. After drilling has been completed on the two outer holes, install the speed nuts on the two lower outer tabs on the grill and attach to the grill surround as shown.



10. Please Note: While these grill tabs line up with the slots in the grill surround, they are not intended to go through them, this would leave the cutouts for the fog lights showing on the front.
11. When you have both lower tabs mounted to the surround, turn over and mark the holes for the upper grill tabs. These steps are done separately to keep the grill centered while mounting to the surround. Make sure you pay attention to the position of the upper part of the grill as it sits in the surround evenly.

**2510 E Sunset Rd Suite #7 Las Vegas, NV 89120**


Phone (702) 262-0011 or Fax (702) 262-0099

Copyright © 2010 Automotive Internet Retailers, LLC all rights reserved

# MUSTANG DEPOT



12. Repeat steps 8 & 9 for mounting the top portion of the grill.

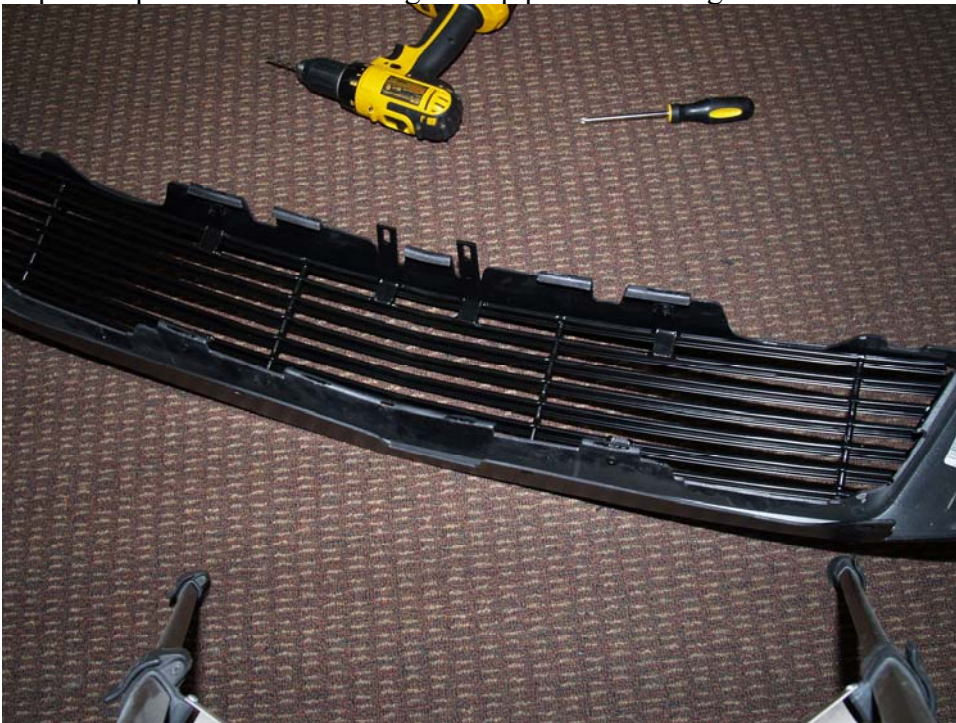

**2510 E Sunset Rd Suite #7 Las Vegas, NV 89120**

Phone (702) 262-0011 or Fax (702) 262-0099

Copyright © 2010 Automotive Internet Retailers, LLC all rights reserved

# MUSTANG DEPOT

13. Once completed, you have the grill installed into the surround. Return to the car to install.



14. The two tabs in the bottom center are what attached the bottom of the grill assembly to the bumper cover. Carefully align these two center tabs with their respective slots while snapping the sides in at the same time. Attach with speed nuts as shown.
15. Re-install the radiator cover with the eight plastic snaps previously set aside, to secure the top portion of the grill assembly. The installation is now complete.



**2510 E Sunset Rd Suite #7 Las Vegas, NV 89120**

Phone (702) 262-0011 or Fax (702) 262-0099

Copyright © 2010 Automotive Internet Retailers, LLC all rights reserved